



Stacker Table Instruction Sheet

IN.S30009-INST
Rev. A

1. Attach top to frame using (6) #10 X 2" pan head screws. Tighten to torque of 30-35 in-lbs.

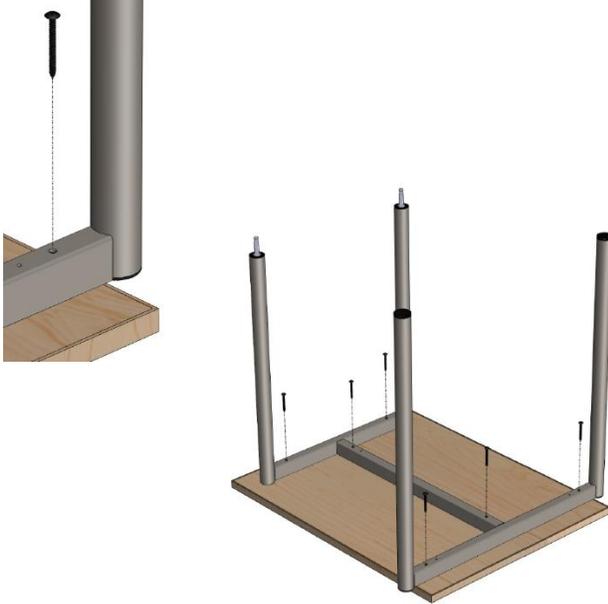

2. Attach (3) bumpers to frame using (3) #8 X 3/4" pan head screws. Tighten to a torque of 30-35 in-lbs.

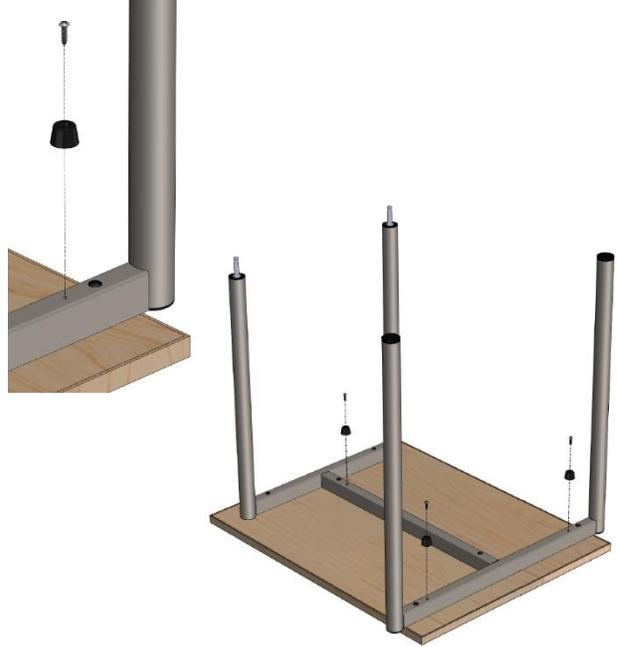

3. If table requires casters, lightly tap casters onto caster stems using a rubber mallet.



4. Carefully flip product over to in-use position.

NOTE: MAXIMUM STACKING QUANTITY IS (3) TABLES



For questions please call us at (616) 396-1142