



Triangle Stacker Instruction Sheet

ST.TR4180-INST
Rev. A

- 1.** Attach top to frame using (6) #10 X 2" pan head screws. Tighten to torque of 30-35 in-lbs.

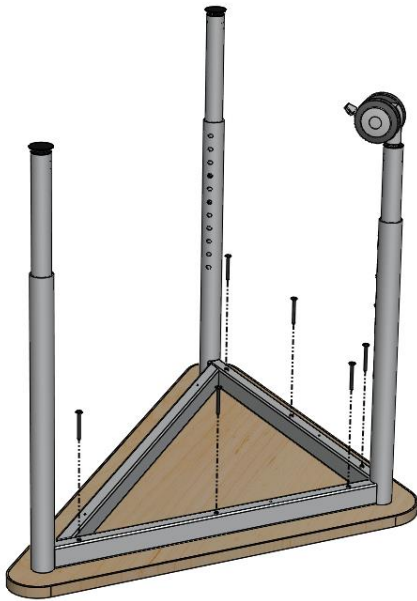

- 2.** Attach (4) bumpers to frame using (4) #8 X 3/4" pan head screws. Tighten to a torque of 30-35 in-lbs.

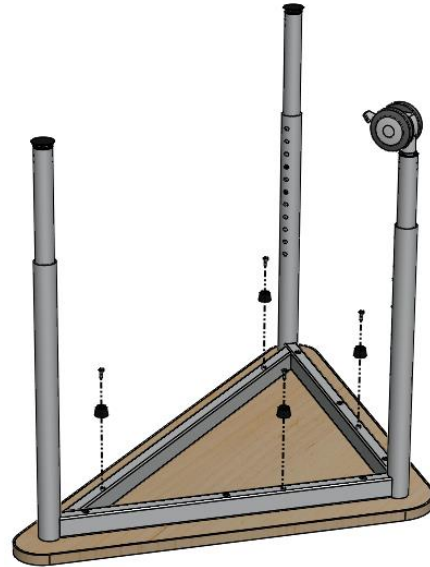

- 3.** If table requires casters, lightly tap casters onto caster stems using a rubber mallet.



- 4.** Carefully flip product over to in-use position.

NOTE: MAXIMUM STACKING QUANTITY IS (3) TABLES



For questions please call us at (616) 396-1142