



# Pedestal Base Footring Instructions

934210-INST  
Rev. A


- 1.** Complete step 1 of the Pedestal Base assembly instructions (931950-INST). Tip the tube assembly on its side and slide the footring onto the tube with the ring facing the top plate (the smaller disk).

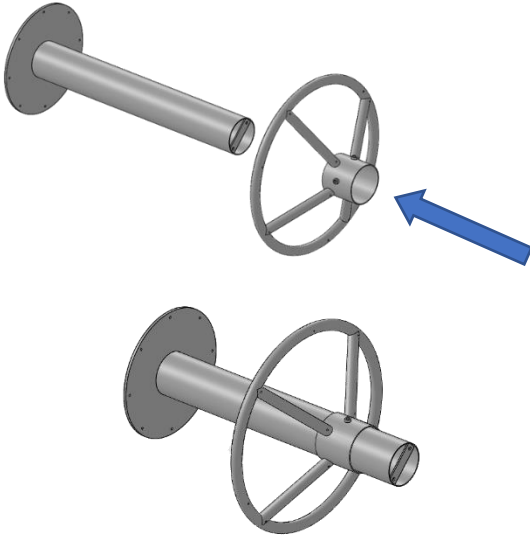


- 2.** Complete steps 2 and 3 of the Pedestal Base assembly instructions (931950-INST).

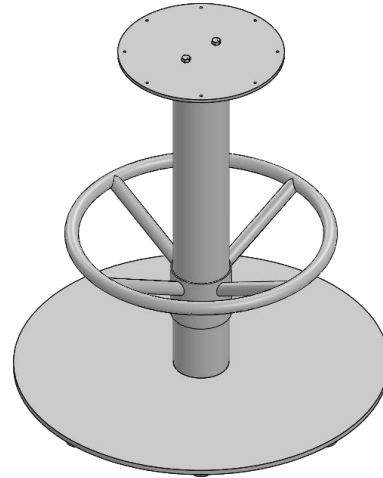

- 3.** Slide the footring down to the bottom of the tube and tighten the (2) set screws to a torque of 45 to 50 in-lb to secure it to the tube. The footring must be touching the bottom plate (the larger disk).

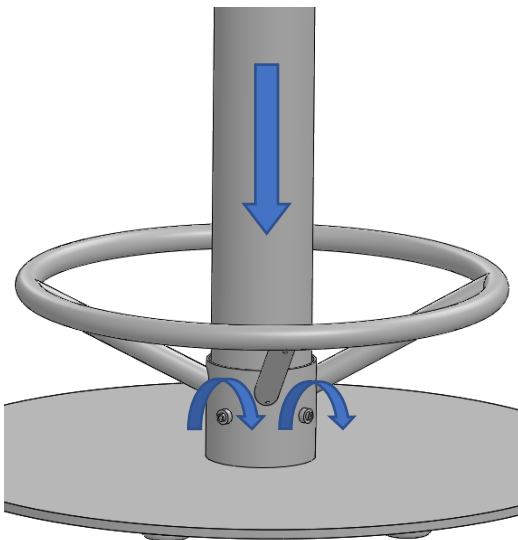

- 4.** Complete step 4 of the Pedestal Base assembly instructions (931950-INST).

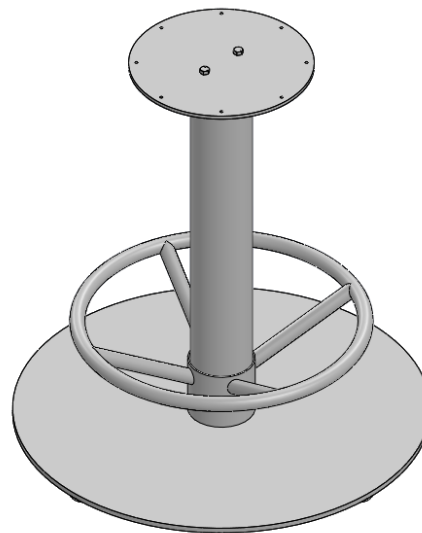

For questions please call us at (616) 396-1142