



# Kidney Table Support Assembly Instructions

131770-INST  
Rev. A


- 1.** Place the worksurface upside down on a non-scratching surface.

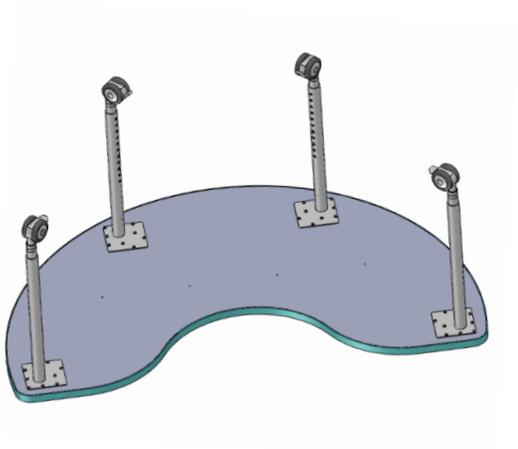


- 2.** Place the tube into position on the worksurface, lining up the screw holes. Dimples should face away from the worksurface.

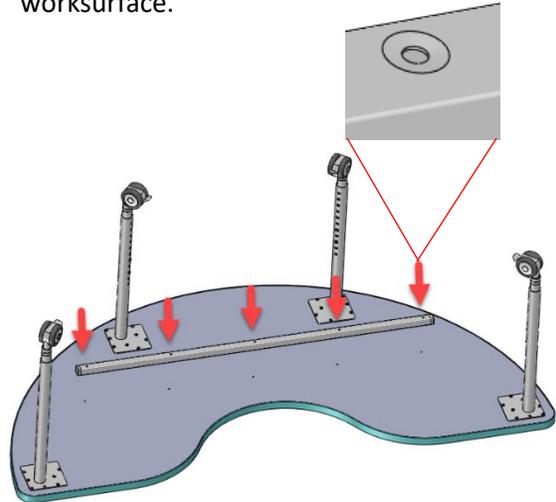

- 3.** Attach the tube support to the worksurface using (4 or 5, depending on the table size) #10 X 1.5" screws. Tighten to a torque of 30-35 in-lb

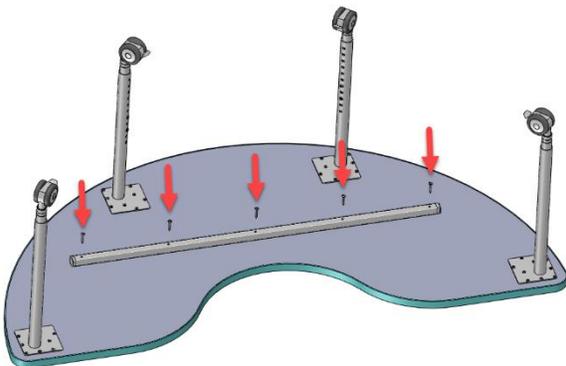

- 4.** Carefully flip the table upright onto the casters

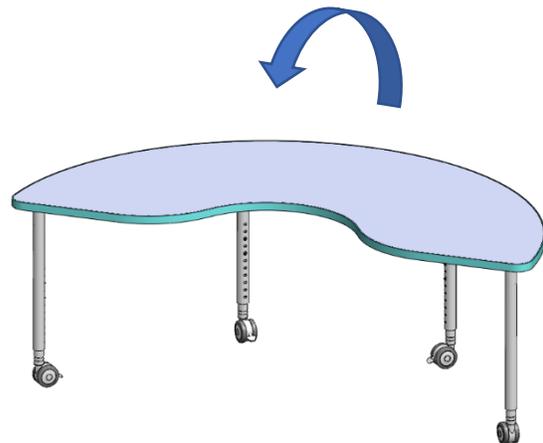

For questions please call us at (616) 396-1142