



Monitor Cart Assembly Instructions

936950-INST
Rev. A


- 1.** Determine the orientation to place the TV hutch on the cabinet. Remove the back panel of the TV hutch by lifting straight up and using the pegs for leverage.

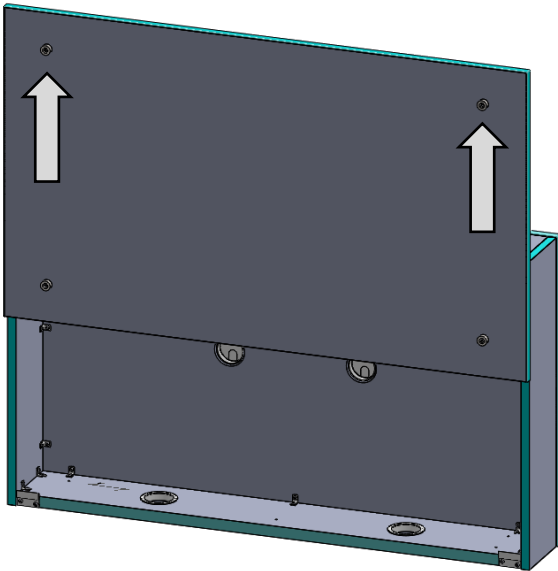


- 2.** Align the holes in the bottom panel of the TV hutch with the holes in the top of the cabinet. Ensure the hutch is centered on the cabinet and then attach the TV hutch to the cabinet using (6) #10 X 1.500" screws. Tighten to a torque of 30-35 in-lbs.

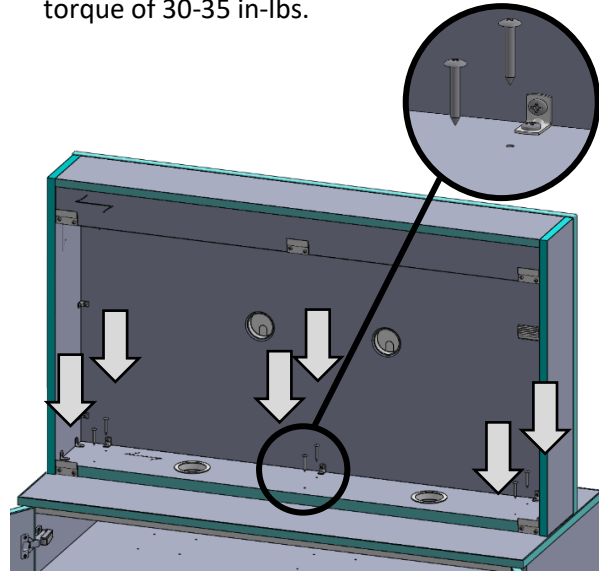

- 3.** *If desired, move the Quadtap location, otherwise skip to step 4.* Align the spacer plate and Quadtap with the chosen set of holes on the upper cabinet shelf. Attach using (4) #10 X 0.875" screws. Tighten to a torque of 30-35 in-lbs.

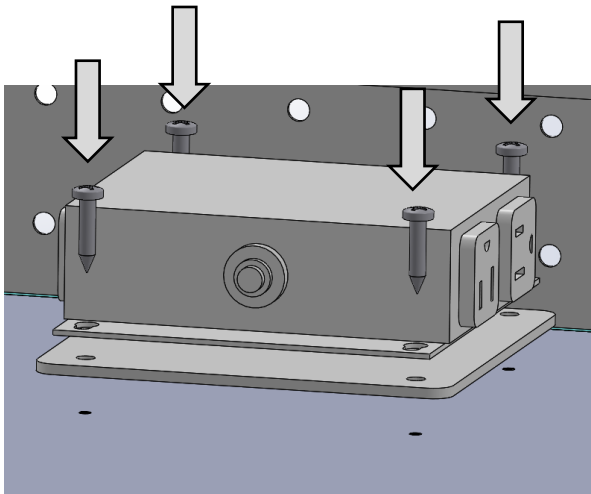

- 4.** Run the Quadtap cord down behind the trays, through the closest cord clamp and out the cart. Replace the back panel of the TV hutch by centering on the cart and lowering onto the clips.

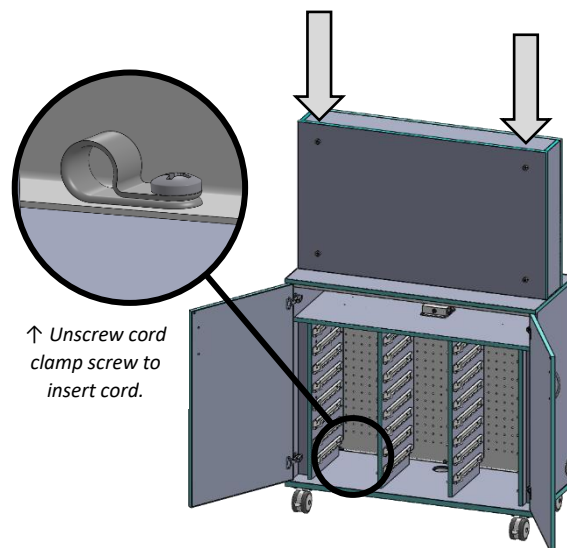

For questions please call us at (616) 396-1142