



Library Tee Filler Instructions

81.TF2413-INST
Rev. A


- 1.** Attach (7) 90-degree brackets with (7) #10 X 0.625" screws to each filler panel. Tighten to a torque of 30-35 in-lbs.

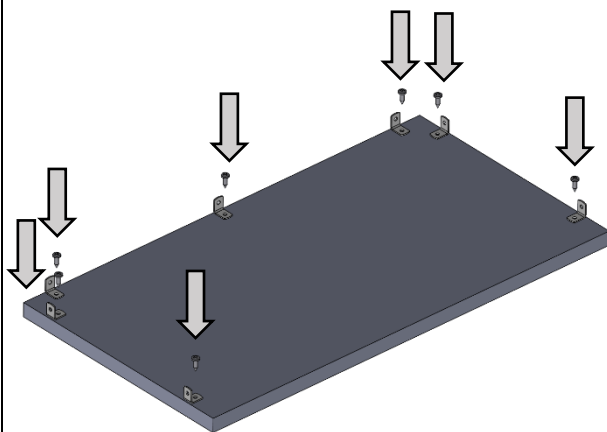


- 2.** Align (1) left hand end panel, (1) right hand end panel, and (1) double end panel from the library shelving assembly. The double end panel should overlap the other panels by 0.25" on each side.

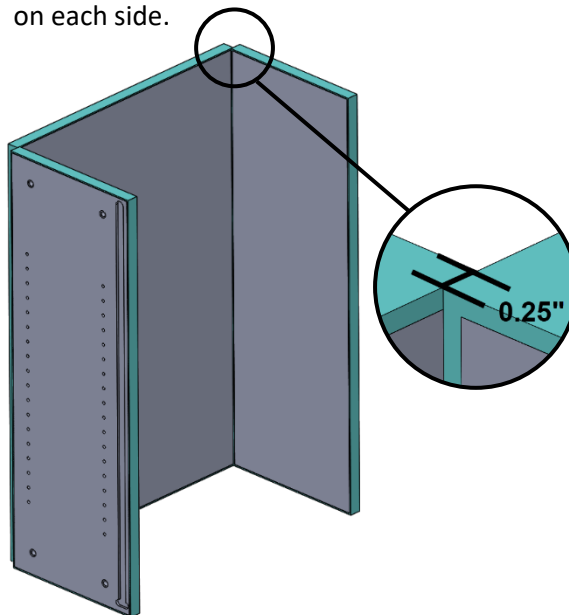

- 3.** At the top of the end panels, align one filler panel with brackets facing down at the bottom of the edgeband. Screw into the panels using (7) #10 X 0.625" screws. Tighten to a torque of 30-35 in-lbs.

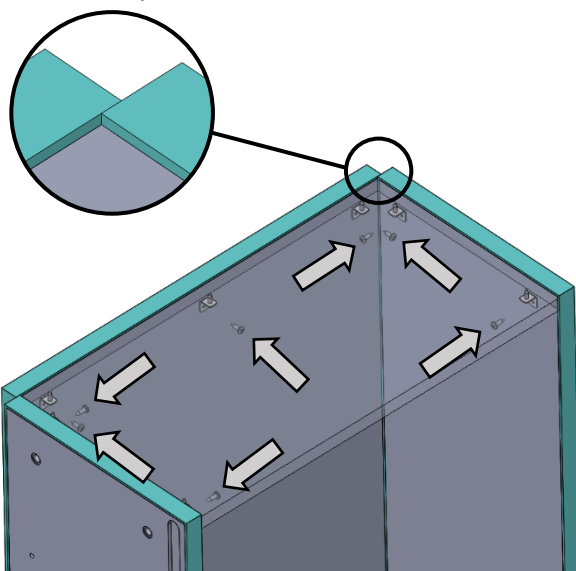

- 4.** Align the second filler panel 4.25" from the bottom of the end panels with brackets facing down. Screw into the end panels using (7) #10 X 0.625" screws. Tighten to a torque of 30-35 in-lbs. Begin the library starter instructions (933710-INST) with the left hand end panel.

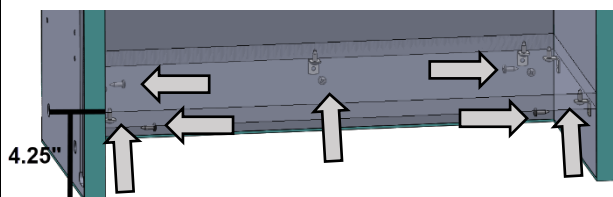

For questions please call us at (616) 396-1142